



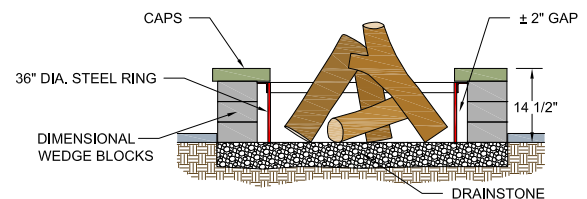

### CROSS SECTION

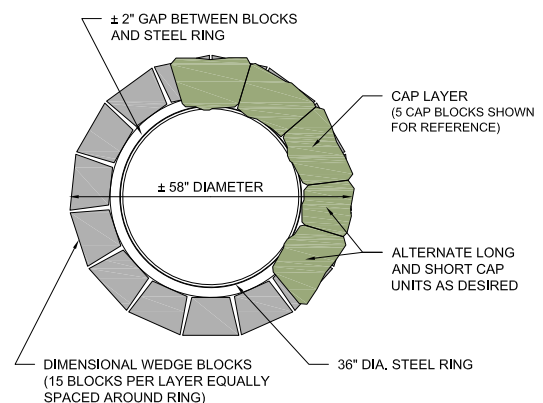

### TOP VIEW



### INCLUDED IN THE KIT:

- 48 Dimensional Wedge Blocks
- 12 Cap Blocks (8 large, 4 small)
- 1 - 36" Diameter Steel Ring



## INSTALLATION INSTRUCTIONS:

1. Mark a 58" diameter circle for the base of the pit
2. Excavate 4-5" for the base. (minimum of 3" paver base and 1" block buried)
3. Add paver base and compact after each inch of stone is laid
4. Check for level and add more stone as needed
5. Set the steel ring upside down on the base so the lip is flush with the ground. This is to help you space out your blocks for the bottom layer.
6. Place the bottom course.
7. Pull out the steel ring and check the blocks for level. Make any adjustments needed with your rubber mallet.
8. Add the next two courses. Off-set the blocks so the joint in the layer below falls in the middle of the block being laid.
9. Place your steel ring back into the center of the pit, this time with the steel lip at the top.
10. Place the cap blocks to check for placement
11. Once coping blocks are set, remove them one by one and apply adhesive.
12. As needed, add additional drain stone or decorative stone to the center of the fire pit.
13. That's it! You're now ready to enjoy your first fire with pride knowing it was handcrafted by you!

**WARNING:** Do not place the fire pit directly atop a patio surface. Instead, the fire pit should be "cut in" to the patio surface to avoid damage to the patio caused by conductive heat transfer.



## INSTALLATION TOOLS:

- Spade Shovel or Flat Head Shovel
- 8" x 8" Hand Tamper
- 4' Level & Torpedo Level
- Rubber Mallet
- Caulk Gun
- Tube of Concrete Adhesive
- Gloves
- Spray Paint to Mark Your Circle
- Stake and String to Mark Your Circle
- Tape Measure
- 2x Bags of Paver Base
- Decorative Stone (Optional)